ASSEMBLY AND USER GUIDE FOR A FLAGPOLE WITH EXTERNAL HALYARD SYSTEM

- 1. Align the **cleat** with the two riveted holes in the pole and secure it to the mast with two bolts.
- 2. Feed the **halyard** through <u>both</u> of the halyard output grooves and pull the halyard straight until the bottom end of the pole. Cut the halyard shorter so that both ends of the halyard are 30 cm below the halyard holder. Burn the ends of the halyard to prevent it from fraying.
- 3. Tie one **plastic snap hook** to one end of the halyard.
- 4. Push the **sleeve** onto the top of the pole so that it locks in place.
- 5. Bring the other end of the halyard to the cleat and feed it through the **halyard opening** in the holder so that <u>both ends</u> of the halyard are on the same side of the holder. Attach a **plastic snap hook** also to this end of the halyard.
- 6. Connect the snap hooks.
- 7. Straighten both halyards together and wind them together around the halyard holder.
- 8. Screw the **finial** onto the sleeve.
- 9. Push the flagpole upright, level it with the adjusting nuts; tighten the nuts.
- 10. Release the double halyard from the cleat and lower the plastic snap hooks by <u>pulling on the halyard that has snap hooks</u>.
- 11. Disconnect the plastic snap hooks from each other.
- 12. Attach the upper snap hook to the flag's upper grommet and the lower snap hook to the lower grommet.
- 13. Raise the flag by pulling on the halyard until the flag reaches the top of the pole.
- 14. Holding the halyards together under a moderate tension, attach them to the cleat.
- 15. Check and, if necessary, tighten nuts
 - 2 3 weeks after installing the pole.





